



# How to Use Your Genuine **FAN-TASTIC VENT** Ceiling Fan

## Operating Instructions:

1. Turn 3 speed knob to desired performance level (0-Off, 1-Low, 2-Medium, 3-High). This activates the fan.
2. Set your Fan Blade action I-On or O-Off. I-On will always pull air from the coach window or door to the outside. O-Off only turns off the fan blade. Dome lift system is still active.
3. Slightly open a window of your choosing. The choice of window will determine how the air is going to flow through the cabin. Maximum airflow will be achieved through one slightly opened window only.
4. Set your interior temperature on the wall mounted thermostat between 60°F and 90°F. When interior ambient temperature is warmer than thermostat setting, the dome opens automatically and the fan blade turns on to the pre-selected speed. When the cabin cools below the thermostat setting, the dome closes and fan blade turns off.
5. If your Fan-Tastic Vent is supplied with a rain sensor, no other action is necessary on your part. In the event that the rain sensor has moisture on it (from rain or dew), the dome will lower automatically until it dries, and then re-open automatically to the settings you had previously set. You may temporarily override the rain sensor by manually raising the dome. See Manual Dome Operation.

**Manual Dome Operation:** Use the dome hand crank knob only in an emergency or for dome adjustment. Pull the knob down (toward the floor) to engage the manual mode. Turn the knob to the desired dome placement. Push the knob back up (toward the sky). Ensure that the knob is "locked" in place.

**Recommendations:** You may use your Fan-Tastic Vent while driving or in windy conditions. In this case keep your dome fully open. Keep your fingers away from the knob while dome is automatically opening or closing unless you deliberately intend to apply opposite force to stop dome partially open. When storing your Motorhome, lower your dome until it is completely closed and turn the 3 speed knob to 0-Off.

**NOTE:** At 1/3 dome open, exhaust efficiency is reduced to 90%.

**NOTE:** Fan-Tastic Vent does not recommend placing a vent cover over, or using a foam filter on your Fan-Tastic Vent. This greatly restricts airflow, causing accumulation of dust and increased sound levels.





# How to Clean the Screen on Your Genuine **FAN-TASTIC VENT**<sup>®</sup> C e i l i n g   F a n



## **Cleaning Instructions:**

- 1 Turn fan motor off.
- 2 Locate the thumb tab on the Pop 'N Lock Screen, grab and pull down to unsnap.
- 3 Wash Pop 'N Lock Screen and fan blade with a light non-abrasive soap, rinse and dry.
- 4 Re-install the Pop 'N Lock Screen by gently snapping back in place.

**Suggestion:** Once screen and blade are washed and dried, you may wipe or spray 303 protector (a water based protector; do not use a petroleum based protector) on the screen and blade. Buff to a high gloss. This will minimize the amount of dust and dirt build up.



## **Cleaning Instructions:**

- 1 Turn fan motor off.
- 2 Remove 8 painted flat head Phillips screws around perimeter of screen insert.
- 3 Clean screen and blade with soap and water solution and reinstall.
- 4 Re-Install the screen by reversing step 2.

**Suggestion:** Once a screen and blade are washed and dried, you may wipe or spray 303 protector (a water based protector, do not use a petroleum based protector) on the screen and blade. Buff to a high gloss. This will minimize the amount of dust and dirt build up.

## **Trouble Shooting:**

Fan-Tastic Vent wishes to assist any customer with any problem or need. Please call 1-800-521-0298 for assistance between 8 am and 5 pm E.S.T.

Fan-Tastic Vent Corp.  
2083 S. Almont Avenue  
Imlay City, MI 48444  
Tel: (810) 724-3818  
Toll Free: 800-521-0298  
[www.fantasticvent.com](http://www.fantasticvent.com)