



How to Use Your Genuine **FAN-TASTIC VENT**[®] C e i l i n g F a n

This fan is not rain sensor equipped



Operating Instructions:

1. Open dome approximately 3 inches or more by turning the hand crank (Fan-Tastic Vent has a built in safety switch that will not allow motor to operate unless dome is partially open.)
2. Turn 3-speed knob to desired performance level (0-Off, 1-Low, 2-Medium, 3-High).
3. With fan blade reverse switch, select IN, which brings air into the coach. OUT brings air into coach through slightly open window and exhausts hot, stale air out through vent to roof. Center (neutral) on this switch turns fan blade only off.
4. This fan is equipped with a built-in thermostat ON is 22°F (deep blue), OFF is 123°F (bright red). Select a setting somewhere in between for your comfort. Fan blade will automatically turn on and off as your coach heats up and cools down. If fan blade rapid cycles on/off, select a more extreme temperature setting to minimize.

Recommendations: You may use your Fan-Tastic Vent while driving or in windy conditions. In this case keep your dome fully open. When storing your Motorhome, lower your dome until it is completely closed and turn the 3 speed knob to 0-Off.

NOTE: At 1/3 dome open, exhaust efficiency is reduced to 90%.

NOTE: Fan-Tastic Vent does not recommend placing a vent cover over, or using a foam filter on your Fan-Tastic Vent. This greatly restricts airflow, causing accumulation of dust and increased sound levels.



How to Clean the Screen on Your Genuine **FAN-TASTIC VENT**[®]

C e i l i n g F a n



Cleaning Instructions:

1. Turn fan motor off.
2. Locate the thumb tab on the Pop 'N Lock Screen, grab and pull down to unsnap.
3. Wash Pop 'N Lock Screen and fan blade with a light non-abrasive soap, rinse and dry.
4. Re-install the Pop 'N Lock Screen by gently snapping back in place.

Suggestion: Once screen and blade are washed and dried, you may wipe or spray 303 protector (a water based protector; do not use a petroleum based protector) on the screen and blade. Buff to a high gloss. This will minimize the amount of dust and dirt build up.

Cleaning Instructions:

1. Turn fan motor off.
2. Remove 8 painted flat head Phillips screws around perimeter of screen insert.
3. Clean screen and blade with soap and water solution and reinstall.
4. Re-Install the screen by reversing step 2.

Suggestion: Once screen and blade are washed and dried, you may wipe or spray 303 protectant (a water based protector; do not use a petroleum based protector) on the screen and blade. Buff to a high gloss. This will minimize the amount of dust and dirt build up.

Troubleshooting:

Fan-Tastic Vent wishes to assist any customer with any problem or need. Please call 1-800-521-0298 for assistance between 8 am and 5 pm E.S.T.

Fan-Tastic Vent Corp.
2083 S. Almont Avenue
Imlay City, MI 48444
Tel: (810) 724-3818
Toll Free: 800-521-0298
www.fantasticvent.com